

Standard Settings for the A80 Wintec Radio

Your radio should be set ready for you to use, the only settings you may need to alter are the 'Channel' & 'CTS' (Sub Channels).

Make sure the radio is unlocked (press & hold the 'SET' button if a 'Padlock' sign is showing in the window, this will allow you to access the menu)

Each press of the 'SET' button will display a different part of the menu.

The following settings are the standard settings:

Menu No:

- 1 - This is the 'CALL' setting, this can be on any setting.
- 2 - This is the 'POWER SAVE' menu, the higher the setting, the more saving of the battery – No.'2' is the usual setting.
- 3 - This is the "VOX" (Voice activated transmission) setting - this must be 'OFF'
- 5 - This is the 'DIFFERENT CHANNEL' menu - this must be 'OFF'
- 6 - This is the 'BUTTON TONE' menu, this controls the beep sound when you press the buttons – this can be 'ON' or 'OFF',
- 7 - This is the 'AUTO POWER OFF' menu - this must be 'OFF'
- 8 - This is the 'TRANSMIT TIME OUT' menu - this must be 'OFF'
- 9 - This is the 'SQUELCH SETTING' that adjusts the reception signal sensitivity - this should be set on L 2
- 11 - This is the 'ROGER TONE' MENU', this controls the 'beep' that other radios hear when you finish your transmission.

WARNING

IF YOU ALTER ANY OF THESE SETTINGS OTHER THAN THE 'VOLUME', 'CHANNEL' OR 'CTS' SETTINGS - YOUR RADIO MAY NOT WORK CORRECTLY